- 1. Mark the slab
- 2. Rough shaping with a ball-peen hammer
- 3. Fine-tune with the hammer


#### WHAT YOU NEED:

#### Crazy paving →

- Chalk
- Ball-peen hammer

## 1. Mark the slab


Mark the desired shape with chalk, as close to the edge as possible to make the best use of the slate slab and minimize waste.

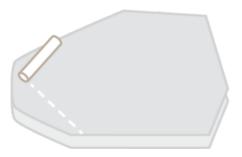

# 2. Rough shaping with a ball-peen hammer

Ensure the slab is well-supported and stable.

Use a ball-peen hammer and strike diagonally along the breaking edge towards the underside of the slab. The thicker the slate, the more force it can withstand.

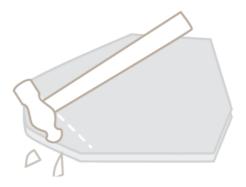

Work gradually inwards towards the chalk line, taking small sections at a time.

You now have a rough edge that gradually tapers inward.

## 3. Fine-tune with the hammer

Finally, use the blunt end of the hammer to trim close to the chalk line for a cleaner finish.

